

-21

Reverse Acting Driver

Driver outputs Inverse to Command Signal. Reverse Acting Command Control.

A Low Command Signal will output Max Current and a High Command Signal will output Min Current.

Functional details and dimensions on the LE P\*X datasheet applies the same to the LE P\*X-21.

---

**Toll Free**

Tel: 1 (888) 626-4365  
Fax: 1 (800) 263-5807

**Local & International**

Tel: +1 (905) 363-2400  
Fax: +1 (905) 363-1191

**Canada (Headquarters)**

1799 Argentia Road  
Mississauga, Ontario L5N 3A2

**USA**

3790 Commerce Court, Suite 500,  
North Tonawanda, NY, 14120