

-34

Open Loop Driver

The LE P*X-34 driver has the standard Closed Loop Current Feedback Disabled. The driver runs Open Loop. The output current is adjusted by Percent of Duty Cycle of the output PWM signal

Functional details and dimensions on the LE P*X datasheet applies the same to the LE P*X-34.

Toll Free

Tel: 1 (888) 626-4365
Fax: 1 (800) 263-5807

Local & International

Tel: +1 (905) 363-2400
Fax: +1 (905) 363-1191

Canada (Headquarters)

1799 Argentia Road
Mississauga, Ontario L5N 3A2

USA

3790 Commerce Court, Suite 500,
North Tonawanda, NY, 14120